

USER MANUAL

SCRAPPER SUBCOMPACT FLASHLIGHT

CONTENTS

KEY FEATURES ·····	. 3
QUICK START & DIAGRAM	. 4
SPECIFICATION	. 5
DELIVERY SETS ·····	. 5
MOUNTING & MAINTENANCE	. 6
CHARGING	. 7
STORAGE & WARNING	. 8
WARRANTY	. 9



NEVER LOOK AT THE LIGHT IT IS HAZARDOUS TO THE EYES. MAKE SURE FIREARMS ARE UNLOADED AND POINTED IN THE SAFE DIRECTION

KEY FEATURES

- 1. Tactical low profile subcompact flashlight
- 2.Lightweight and aluminum structure design
- 3.Click button switch for power on/off




5.Built-in rechargeable lithium battery compatible with magnetic type charger

6. Charging and battery power indicator to clarify the device status



QUICK START & DIAGRAM

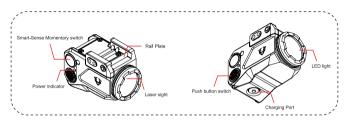

- * Simply Click either side and much the button switch to turn on or turn off the unit.
- . Turn on the unit, put your finger over the Smart-Sense Momentary On/off Switch to momentarily turn off the unit. Remove the finger and the unit will turn back on.
- *Turn on the unit, and make sure the Smart-Sense Momentary On/off Switch is not being covered. Press and hold on to the Push Button Switch for 2 seconds to change the Working Mode.
- . Under any status, double-elick either side of the push button switch to activate the LED strobe function, and double-elick again to exit.
- When the flashlight is on, put a finger over the smart-sensor switch which is on the other side for the unit to momentarily turn o dit the unit. Move the finger away to resume the unit.
- . In LED mode, click both side push button switches at the same time to adjust LED brightness(500lm-200lm-40lm).

SPECIFICATION

Laser Wavelength	Green Laser		Red Laser		
	510-532nm,<5mW, class 3A		630-650nm,<5mW, class 3A		
Housing material	Aluminum alloy 6061-T6				
Dimension	≤64x28x35mm (2.5x1.1x1.4in)	≤55x28x38mm (2.2x1.1x1.5in)		≤64x28x35mm (2.5x1.1x1.4in)	
Battery Type	Built-in rechargeable lithium				
Battery Runtime	≥1 hour				
Working Mode	Constant				

DELIVERY SETS

✓ Laser Light Combo ✓ Charging Cable ✓ Wrench ✓ User Manual ✓ Packing Box

MOUNTING

The flashlight is installed on the gun by means of its integrated weaver mount. Loosen the locking screw, slide the flashlight on to the standard weaver or picatinny rail. Choose the proper mounting position and make sure it sits flat on the rail, choose proper retreat insertion and align it within the recoil groove on the weaver / picatinny rail. fasten the locking screw. Don't exceed 16 inches/pounds of torque on the flashlight's screws.

SEALED AND WATER-RESISTANT

The unit has an O-ring to prevent the entry of dust or moisture or rain.

MAINTENANCE

Your flashlight, though amazingly tough, is a precision instrument that deserves reasonable cautious care.

When cleaning the flashlight, first blow away any dirt and dust, or use a soft lens brush. Fingerprints and lubricants can be wiped off with a tissue, or soft clean cotton cloth, moistened with lens cleaning fluid.

All moving parts of the flashlight are permanently lubricated. Do not try to lubricate them.

No maintenance is needed on the light's outer surface, except to occasionally wipe off dirt or fingerprints with a soft cloth.

CHARGING

With the supplied magnetic charging cable, connect the product to start charging.

NOTE: The battery power indicator will iluminate according to the chart below while charging and discharging.

Light Indicating	Red	Yellow	Green	
Battery Capacity Indication	Less than 25%	25% to 75%	More than 75%	

7

STORAGE

Avoid storing the flashlight in hot places, such as the passenger compartments of vehicles on hot days. The high temperatures could adversely affect the lubricants and sealants. A vehicle's trunk, a gun cabinet, or a closet is preferable.

SAFETY & WARNING

· Direct viewing of the flashlight is hazardous to the eyes.

For more information please visit our website: www.vaide.com

- Never look directly into the flashlight beam.
- Never point a flashlight at the person.
- Do not allow children to use flashlights unless under adult supervision.

8

THREE YEARS LIMITED WARRANTY

Your Vaide product is warranted free of defects in materials and workmanship for a period of 3 years from the time of purchase by the original purchaser. This warranty covers accidental damage, as well as any defects in materials and workmanship. Batteries, damages caused by misuse or improper handling are not covered. In the event of a defect under this warranty, we promise to repair or replace your product and ship it back to you absolutely free of charge. Also, this warranty is null and void if modification or maintenance is provided by someone other than Vaide. This warranty is non-transferable.

For products not directly purchased from us, please contact the local dealer for an applicable warranty.

For more details please visit our website, thanks for your support.

WWW.VAIDE.COM





NOTES				

NOTES				

