




USER MANUAL FOR FORESTER BINOCULAR

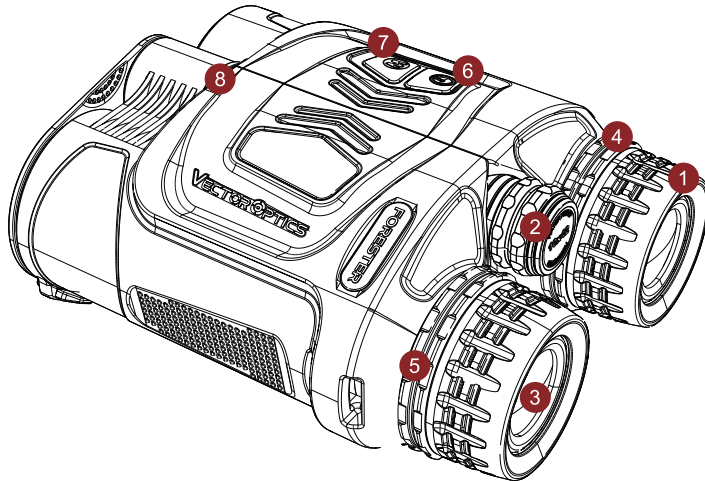


- ① Twist-Up Eyecups
- ② Battery Compartment
- ③ Eye Piece
- ④ Right Diopter Focus
- ⑤ Left Diopter Focus
- ⑥ Power Button
- ⑦ Mode Button
- ⑧ Receiver Lens

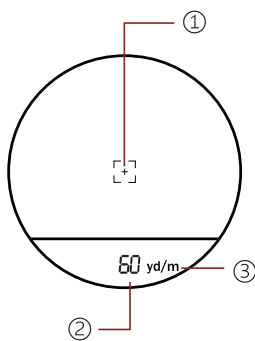


- ① Aiming Reticle
- ② Line-of-sight Distance / Angle Value
Height Value / Horizontal Distance
- ③ Unit: M--Meter, Y--Yard

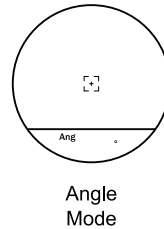

Angle Mode

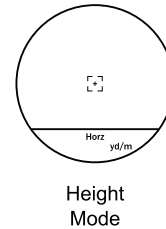

Height Mode

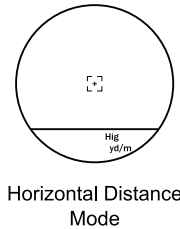

Horizontal Distance Mode



Never Look Directly At The Sun With Your Binocular, As It May Cause Serious Damage To Your Eyes.


NOTE: Remove the caps on the front and back of the binocular before use.

EYECUP


The binocular is fitted with eyecups delivering a comfortable view of the full field. If you do not wear glasses when viewing, the binocular is used with the eyecups fully extended. If you wear glasses when viewing, the binocular is used with the eyecups set in closer.

ADJUST THE INTERPUPILLARY DISTANCE

The IPD stands for interpupillary distance. That's the distance between the centers of your pupils (in other words, how far your eyes are apart). Match the IPD of your eyes and your binocular by rotating the barrels in or out until you see a single image free of shading.

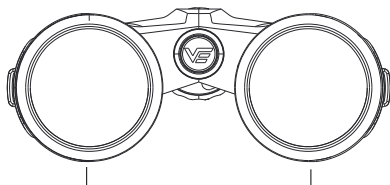

IPD
Distance between the centers of the ocular lenses.

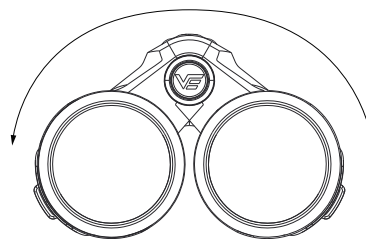

Rotate the barrels in or out to match the IPD of your eyes with that of the binocular.

FOCUS ADJUSTMENT

For the best results, follow this two-step process to properly adjust the focus.

- ① Close your right eye or use the lens cap to cover the objective lens on the right side of the binocular. Adjust the left diopter focus ring until the image is as sharp and clear as possible;
- ② Close your left eye or use the lens cap to cover the objective lens on the left side of the binocular. Rotate the right diopter focus ring located below the right eyecup until the image is as sharp and clear as possible.


POWER ON

Press the 'POWER' button for about 0.5 seconds to turn on the unit.

The unit will shut down automatically if there is no operation after 20 seconds. The default display at first use will be shown like the picture in the figure below, in the future, it will display the last setting.



POWER


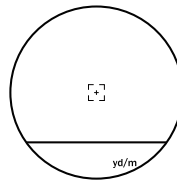


DISTANCE UNIT OPTION

Press and hold the 'MODE' button to choose Y (Yards) or M (Meters), and press the 'POWER' button to confirm the selection.




MODE

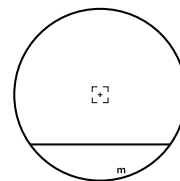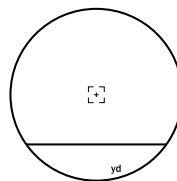


RANGING MODE OPTION

Short press the 'MODE' button to cyclic selection "Distance Mode", "Angle Mode", "Height Mode" or "Horizontal Distance Mode", press the 'POWER' button to confirm the selection.


* Default at "Distance Mode"

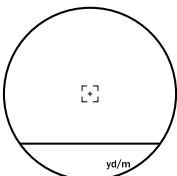


Distance Mode

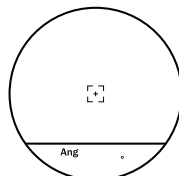

Angle Mode

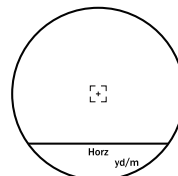


Height Mode

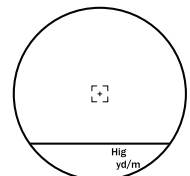

Horizontal Distance Mode

Distance Mode

Short press the power button to measure the target. In the distance measurement mode, the target distance is displayed on the bottom half of the display until you take another measurement or the display goes off after 20 seconds.

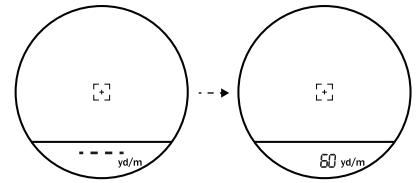


* If the target reflection is weak or out of range, '- - -' will be displayed instead.

Angle Mode

Short press the power button to measure the target.


In the angle mode, the angle value is displayed on the bottom half of the display until you take another measurement or the display goes off after 20 seconds.

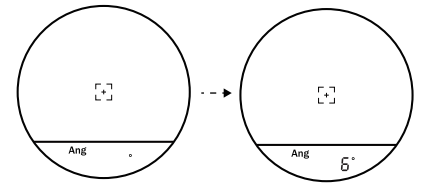

Height Mode

Short press the power button to measure the target.


In the height mode, the height value is displayed on the bottom half of the display until you take another measurement or the display goes off after 20 seconds.

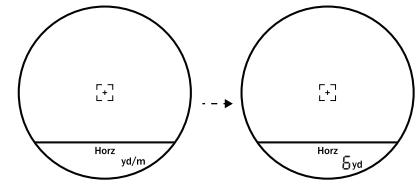

Horizontal Distance Mode

Short press the power button to measure the target.

In the true horizontal distance mode, the line of sight distance is displayed on the bottom half of the display until you take another measurement or the display goes off after 20 seconds.

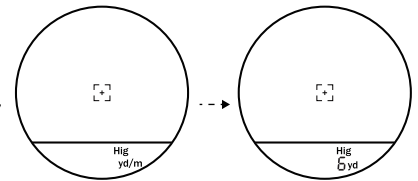


RANGING

Short press the power button to range, and hold the power button for over 2 seconds to enter Scan mode, with distance changing based on the different target.

LOW BATTERY WARNING

When the battery voltage is lower than 20%, the low battery warning will blink. It can also measure distance about 350 times.

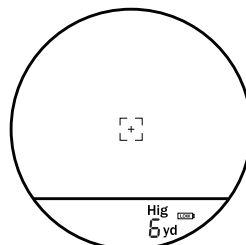

BATTERY EXCHANGE

Your range finder binocular is powered by 1 piece of CR2 battery. To insert, remove, or replace the battery: Release the battery compartment cover. Remove the used battery from the battery compartment. Insert a new one from a reputable manufacturer with the positive (+) side UP. Screw on the battery compartment cover.



MAINTENANCE

Your binocular optics, though amazingly tough, is a precision instrument that deserves reasonable cautious care.

- When cleaning the lens, first blow away any dirt and dust, or use a soft lens brush. Fingerprints and lubricants can be wiped off with lens tissue, or soft microfiber clean cotton cloth, moistened with lens cleaning fluid.
- All moving parts of the binocular are permanently lubricated. Do not try to lubricate them.
- No maintenance is needed on the binocular's external surface, except to occasionally wipe off dirt fingerprints with a soft cloth.



Make sure the laser is deactivated. It is recommended to remove the battery to ensure the laser will not activate during maintenance procedures.

STORAGE

Avoid storing the binoculars in hot places, such as the passenger compartments of vehicles on hot days. The high temperatures could adversely affect the lubricants and sealants. A vehicle's trunk, a gun cabinet, or a closet is preferable. Never leave the device where direct sunlight can enter either the optics lens.



Protect the binocular from drop or impact and do not force any of the moving parts beyond the limits. Do not disassemble the binocular by yourself.

VECTOR OPTICS[®].COM

