



TORQUE SCREWDRIVER USER MANUAL

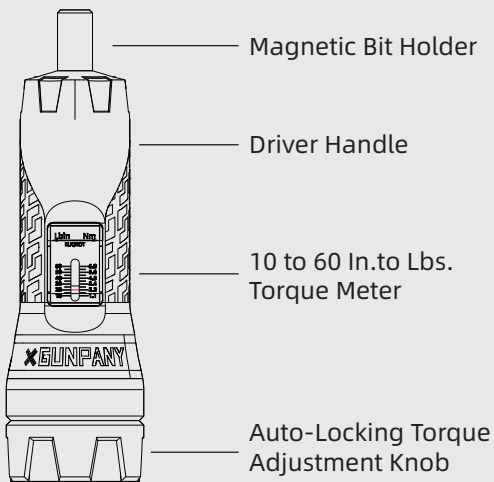

Bit	H1.5	H2	H2.5	H4	PH2
Screw	M1.5	M2.5	M3	M5	Cross Bit

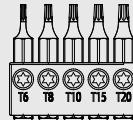

Bit	T6	T8	T10	T15	T20
Screw	M2	M2.5	M3	M3.5-M4	M4

- 1** Pull Down Unlock
- 2** Rotating the Auto-Locking Torque Adjustment Knob counterclockwise, the torque decreases. Rotating the Auto-Locking Torque Adjustment Knob clockwise, the torque increases.
- 3** Pull Up Lock
- 4** Choose the right Bit

SUGGESTED TORQUE VALUE:

